

# INSTRUCTIONS CARE AND MAINTENANCE FOR PACKER COVERS, BRANCHLINE TOOL (DUAL LAYER)

**INDOOR  
OPTIMIZED  
EQUIPMENT**  
[www.sacpro.se](http://www.sacpro.se)



**NOTE!** These instructions only apply Branchline tools with a packer cover that has a multi-layer material with a silicone surface.

**OBS!** Instruktionerna gäller endast Branchline verktyg med fixturer som har ett flerskiktmaterial med en silikonyta



## CARE AND MAINTENANCE OF PACKER COVERS WITH A SUR- FACE OF SILICON

To ensure longest possible durability of the packer cover, we recommend you to read, and follow these instructions.

### BEFORE USE (THE INSIDE):

Spray silicone spray into the air connection of the packer holder to lubricate the inside of the packer cover (we do recommend Rivotla). Repeat procedure as often as necessary (approx. every 5 sets when ambient cured or between every set when steam/hot cured).

**NOTE!** The pull string must not be used when dismantling the packer tool/holder. The pull string is only an installation aid as the pull string is mounted in such way that the packer cover will be damaged if used for dismantling. In order to remove a BL-tool you simply apply vacuum until empty, then push the packer holder/tool forward into the main, twist the holder and retract the complete packer holder/tool.

### AFTER USE:

Clean the packer cover. Use water if necessary, to make sure that you get rid of all remaining epoxy residue.

### STORAGE:

At normal room temperature (+20°C) wrapped in plastic or in the plastic tubes that follow the packer holder.

**NOTE! THE ADDED TEMPERATURE MUST NOT BE GREATER THAN +50°C. THE MAXIMUM PRESSURE IS 0,5 BAR.**



## SKÖTSELANVISNINGAR AV GRENRÖRSVERKTYG MED EN SILKONBASERAD YTA

För att Grenrörsfixturen ska hålla så länge som möjligt, rekommenderar vi er att följa dessa anvisningar.

### FÖRE ANVÄNDNING INVÄNDIGT:

Spraya silikonspray (vi rekommenderar Rivotla) in i fixturhållarens luftanslutning för att minska friktionen invändigt i verktyget. Upprepa detta vid behov (ca var 5:e gång vid kallhärdning, eller varje gång vid ånghärdning).

**OBS!** Dragsnöret går inte att använda vid demontering. Snöret används bara som hjälpmedel vid installation då det går uppåt i verktyget och inte neråt. Om snöret används vid demontering så kommer grenrörsfixturen att nötas ut vid överkant på grenrörets anslutning. För att demontera grenrörsverktyget så ska luften sugas ut, verktyget ska knuffas ut i huvudledningen och sedan vrider man verktyget och drar ut.


### EFTER ANVÄNDNING:

Tag bort eventuella epoxirester. Vid behov kan vatten användas.

### FÖRVARING:

Inlindad i plast i rumstemperatur.

**OBS! MAX TILLFÖRD TEMPERATUR +50°C. MAXTRYCK 0,5 BAR.**

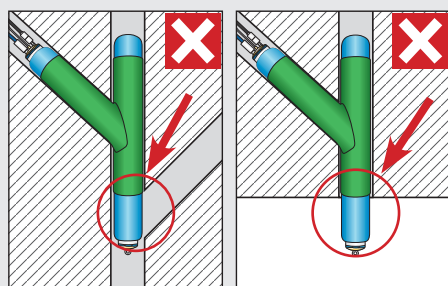

**NOTE!** Parts of the packer cover that is not covered by the feed branch pipe, must not be pressurized (installed) without being protected if it is in the open air, outside a pipe or there is another connection in the pipe to close the installation. Protect the exposed part of the packer cover with a piece of calibration hose, pipe or equivalent.

**OBS!** De delar av fixturen som inte täcks av fodergrenröret, får inte sättas under tryck (installeras) utan att skyddas om det ligger i fria luften, dvs utanför ett rör eller ett annat grenstick ansluter för nära installationen. Skydda utsatta delen av fixturen med en bit kalibrerings slang, rör eller annat.



**SACTOOLS®**  
a product line from sacpro.se

**SACPRO**  
[www.sacpro.se](http://www.sacpro.se)

Sacpro AB, Källviksv. 10, 791 52 Falun, Sweden, +46 (0)23-79 06 50